


Instruction

REVO Automation




Emergency gear DIN version

Pull out for changing
position off action lever

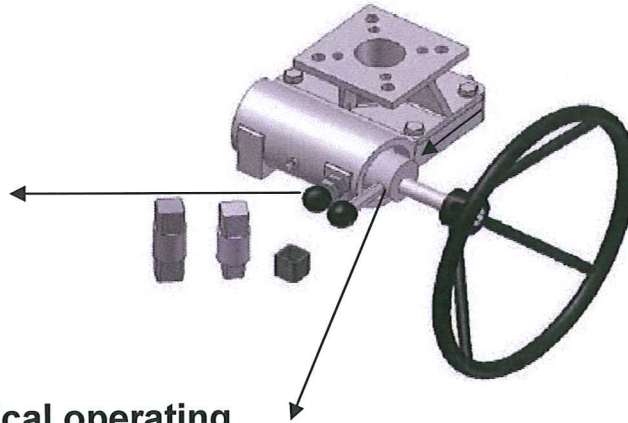


For Pneumatic / electrical operating

Action lever must be in "off" position

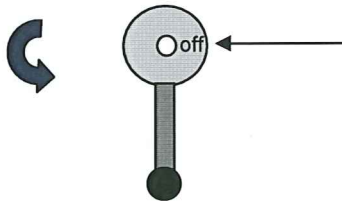

For Manuel operating

Action lever must be in "on" position

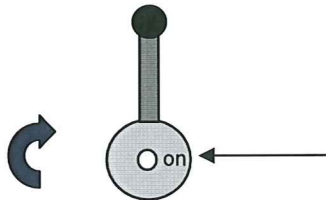

Nyager 12 · DK-2605 Brøndby
Tel: +45 43 64 66 11 · Fax: +45 43 64 11 42
e-mail: info@klinger.dk · www.klinger.dk